POWERED BY LENMAR®

Model: SPK302
Miniboom Bluetooth Speaker

Bluetooth™

PLEASE READ THIS INFORMATION THOROUGHLY BEFORE USING THIS PRODUCT. IT CONTAINS IMPORTANT OPERATING INSTRUCTIONS FOR YOUR SPEAKER.

Owner's Manual

Thank you for purchasing the SPK302 Miniboom Bluetooth Speaker.

This speaker can be easily connected to any smartphone, tablet, laptop, music/multi-media player, or other portable device via Bluetooth or by cable (included).

Included in the package you have purchased: SPK302 Lenmar Miniboom Bluetooth Speaker, USB Charging Cord, Audio Cable and User Manual.

Speaker Controls

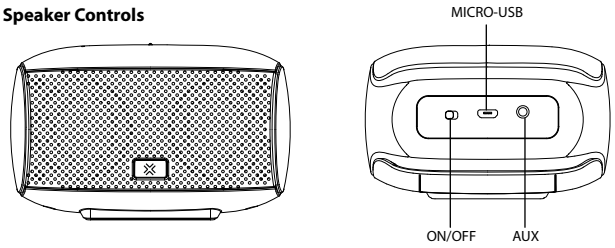

Getting Started: Touch button on the top

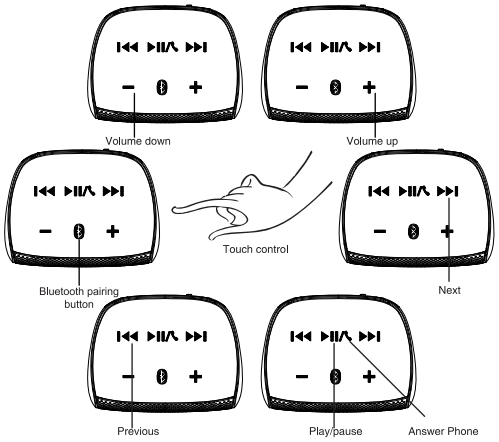

Note: When listening to music, touch the ▶II/ to start or pause. Touching I◀◀ or ▶▶I allows you to skip to the previous or next song.

LED Charging Status Indicator

Button	Operation	Function
▶▶I	Long Press	Volume up
▶▶I	Short Press	Next song
I◀◀	Long Press	Volume down
I◀◀	Short Press	Previous song
▶II/	Short Press	Play/Pause, Answer/End a call
ᛒ	Long Press	Turn on/off Bluetooth

What you see	What it means
Red LED Blinks Quickly	Low Battery, Charge Battery
Red LED Blinks Slowly	Charging in Progress
RED LED Stays Solid	Charging Complete

Charging Your Speaker

This device is powered by a rechargeable lithium-polymer battery. Prior to initial use please charge the battery fully using the included USB cable.

To charge your speaker, switch the "ON/OFF" button to "ON." You will hear a long beep when the speaker turns on. You have the option of charging the speaker while connected to a computer or USB wall adapter.

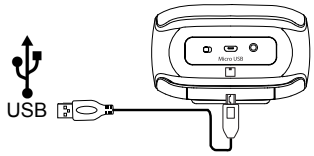

It will take approximately 4 hours to charge your speaker battery.

Setting Up Bluetooth Connection

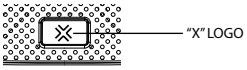

Connecting a Smartphone to the Speaker

1. Turn on the Bluetooth function of your smartphone.
2. Switch the speaker to the "ON" position. A long beep will be heard when the speaker is turned on, followed by two low pitched sounds when the Bluetooth feature is turned on. The "X" logo LED will keep blinking when no Bluetooth connection is made.
3. Look for the device "Bluetooth" name on your smartphone under the devices list, touch connect and you will hear one low pitched sound when the connection is successful. The "X" logo LED will blink slowly when the Bluetooth connection has been established.
4. To disconnect the speaker when it is paired with your smartphone, touch and hold the Bluetooth pairing button ᛒ to turn off Bluetooth, then the speaker can be paired with other Bluetooth devices

Connecting a Computer to the Speaker

1. If your computer is Bluetooth compatible, switch the speaker to the "ON" position. A long beep will be heard when the speaker is turned on, followed by two low pitched beeps when the Bluetooth feature is turned on. The "X" logo LED keeps blinking when no Bluetooth connection is made.
2. Open the control panel of your computer, then locate and click "Bluetooth Devices"
3. Click "Add" look for the speaker listed as "Bluetooth" in the devices list, if a password is required, enter "0000" you will hear one low pitched sound when the connection is successful. The "X" logo LED will blink slowly when the Bluetooth connection has been established.
4. To disconnect the speaker when it is paired with your computer, touch and hold the Bluetooth pairing button ᛒ to turn off Bluetooth, then the speaker can be paired with other Bluetooth devices.

Connecting Directly to a Device

You may also use the included audio cable for audio input from a computer, smartphone or other audio device.

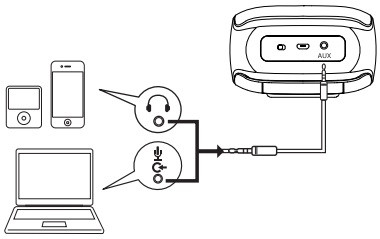

NFC Connection

NFC - Near Field Communication, is a set of standards for smartphone and similar devices to establish radio communications with each other by touching them together or bringing them into close proximity, usually no more than a few centimeters. Please activate the NFC and Bluetooth function subject to your phones settings. Bring your phone close to the speaker. Your smartphone will ask you whether you need to pair the speaker, confirm it by "YES or "OK", then the pairing process is complete

Using as a Speakerphone

You can use the speaker as a hands-free microphone and speaker. Touch the ▶II/ to answer or end a phone call.

For Skype or other internet phone calls, all functions must be controlled via the computer.

Precautions

Do not operate speaker near places with frequent static electricity or electrical noise. Do not store in an area that is damp, humid, wet, or near a magnetic field such as near credit cards or video screens. The speaker should remain in temperatures between 15°C and 25°C (or 59°F - 77°F).

Do not use solvents to clean the speaker. A soft cloth or damp chamois leather is best.

If there is a battery leak, discontinue use of the speaker. You may contact Lenmar Enterprises, Inc. for more information about product warranties or repairs.

Please dispose of the speaker and/or batteries according to local regulations. Do not dispose as household waste. Do not dispose of in a hot or cold place or near exposure to fire as the battery may explode.

Please keep out of reach of children.

Specifications

- Amplifier Max Output Power: 3W + 3W = 6W max
- Frequency Range: 100HZ~10KHZ
- Power Supply: Removable Lithium-Polymer Battery / USB Cable
- 6W Bluetooth v2.1+EDR, CSR BC5
- Built-in battery changeable Li-Polymer battery via USB
- Operating range up to 10 meters, plays well in a room up to 50M²
- Operation voltage min. 3V; max. 4.2V DC
- Drain current (power on, no input) typ. 30mA
- Battery charging current 230mA
- Battery Capacity: 900mAh, 3.3Wh
- Battery charging voltage typ. 5V; max. 5.5V DC (via USB port)
- Hands-free speaker with mobile phone
- Plays music non-stop for up to 8 hours on built-in battery
- Battery playback life up to 8 hours depending on music style and use conditions
- Charging Time: 4 hours
- Standby Time: Up to 30 hours
- Size: 103.5mm x 78.6mm x 65mm
- Weight: 241g

Limited 1 Year Warranty

Lenmar product is warranted to be free of defective parts and workmanship for stated period from the original date of purchase when sold through our website or our authorized retailers. Warranties are not transferable. The warranty excludes damage resulting from accident, misuse, modification, delay or loss of use, damage to equipment or by normal wear and tear.

ALL WARRANTY CLAIMS ARE PROCESSED ONLINE AT THE FOLLOWING LINK:
WWW.LENMAR.COM/WARRANTY

Warranty claims made after 60 days from the original date of purchase, will require a processing fee. Details will be included while completing the online warranty request. Payment can be made via credit card when completing the warranty form or a check can be included with the package when it is returned to Lenmar. Once the request is completed, you will be emailed with a confirmation WRA number and instructions on how to return the item for a warranty replacement.

Proposition 65 Notice (California)
The following statement is required in the state of California pursuant to the settlement of an action brought by the Mateel Environmental Justice Foundation against multiple electronics and appliance manufacturers

• WARNING: Handling the cord on this product will expose you to lead, a chemical known to the state of California to cause birth defects or other reproductive harm. Wash hands after handling.

For additional questions, comments, or to explore other Lenmar power solutions, visit our website at: www.lenmar.com or call 800.424.2703 from 9AM – 5PM PST.

313-118-08-0531 r1 y1

Lithium-Polymer battery must be recycled or disposed of properly.

RECYCLE RBRC Li-Ion 1.800.822.8837